



# Air Law – Parallel Runway Procedures


## Mode 1: Independent Parallel Approach

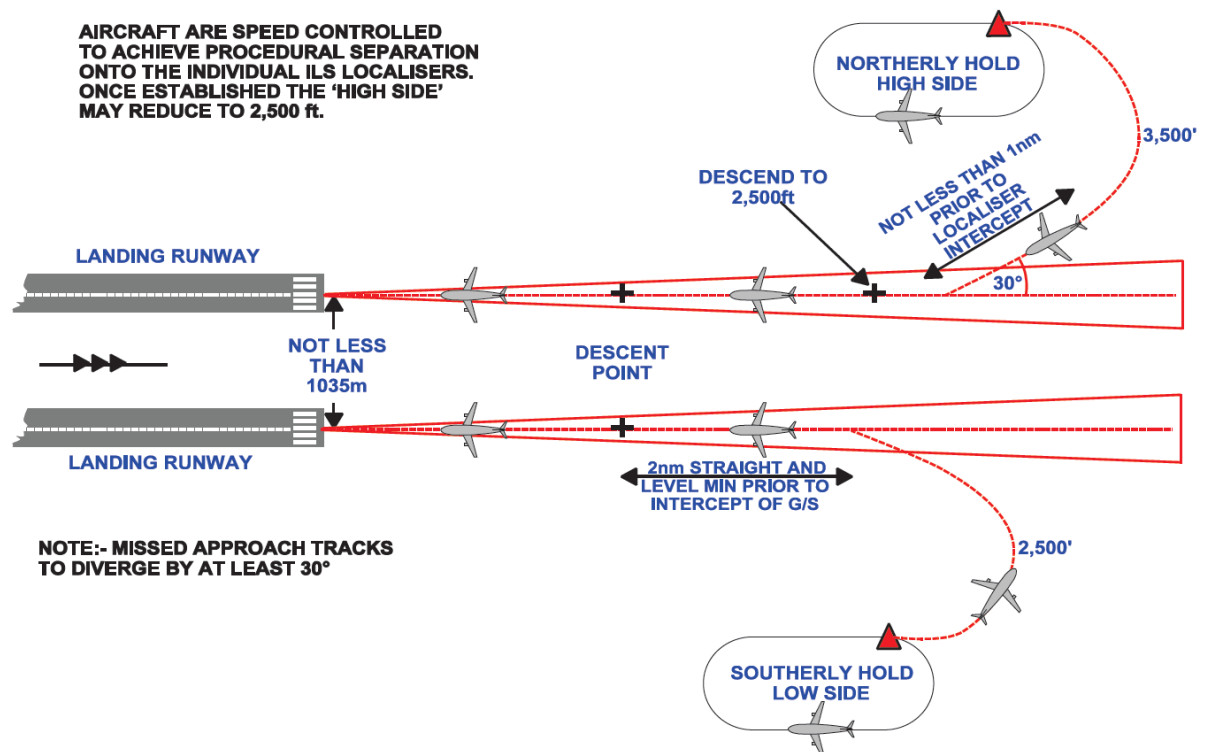


## Mode 2: Dependant Parallel Approaches

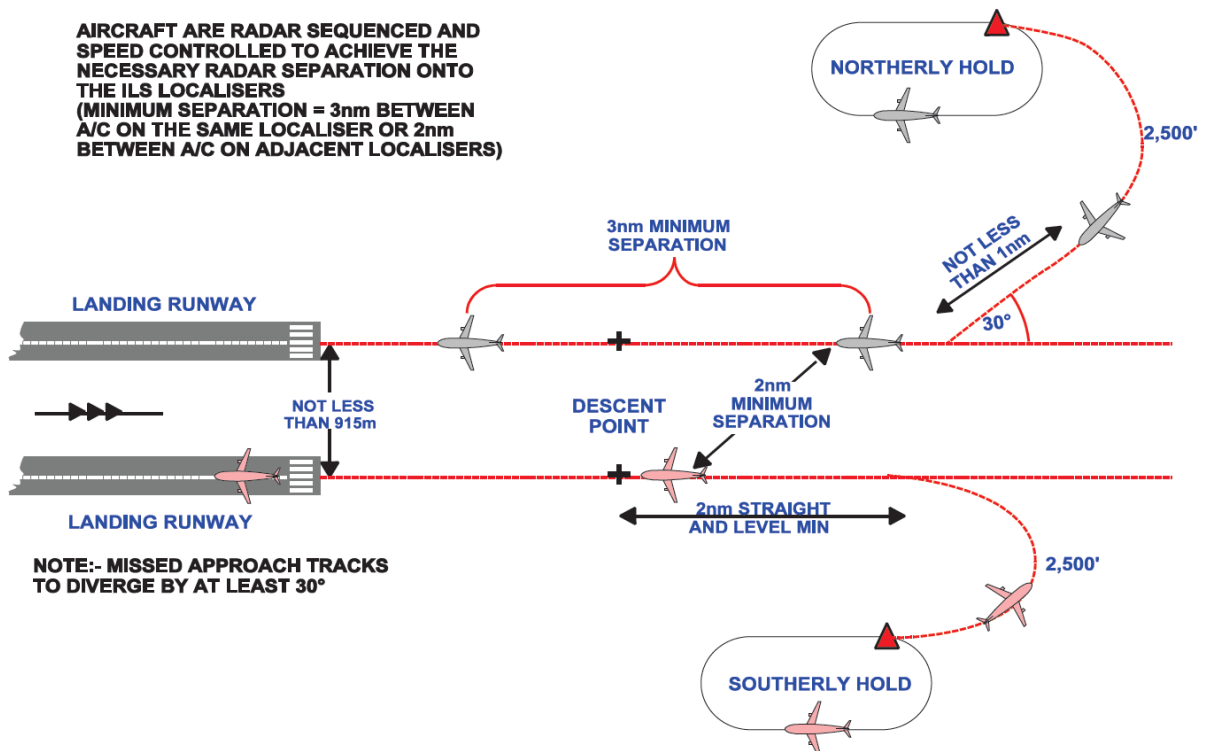


### Mode 3: Simultaneous Instrument Departures

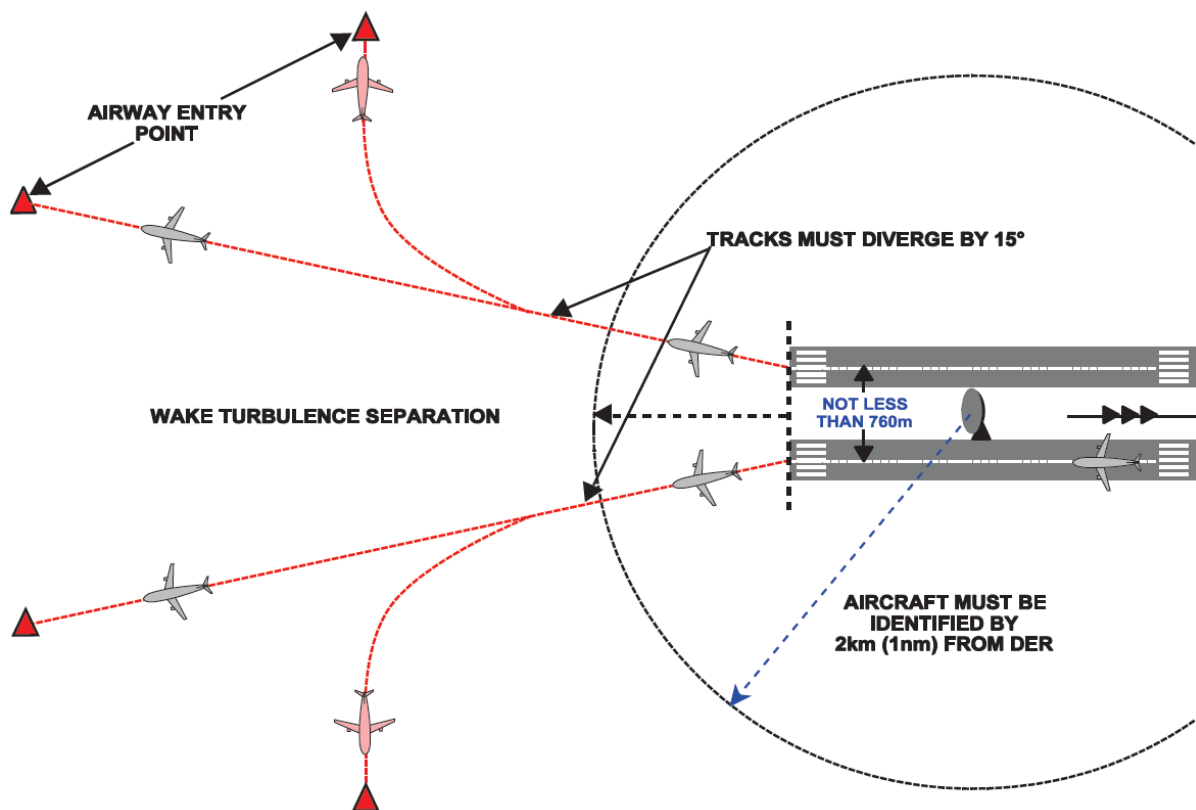

### Mode 4: Segregated Departures and Arrivals

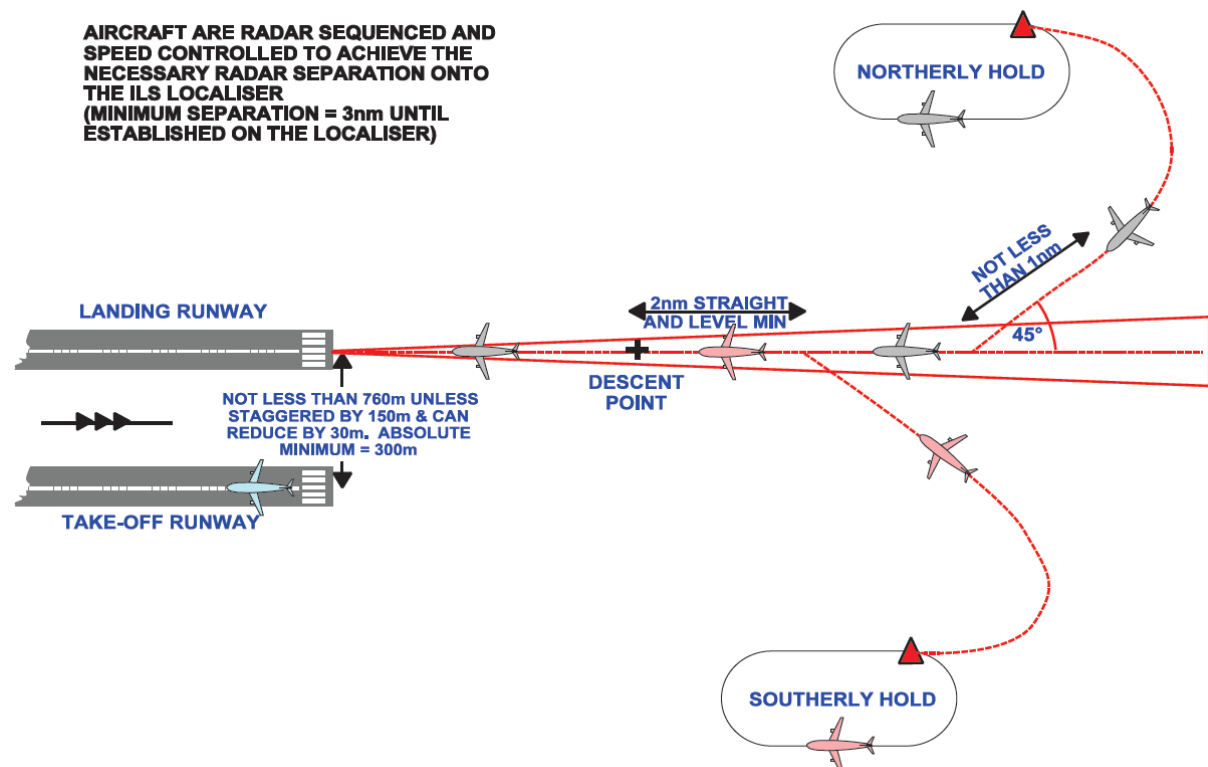

## Normal Operating Zone (NOZ) and No Transgression Zone (NTZ)

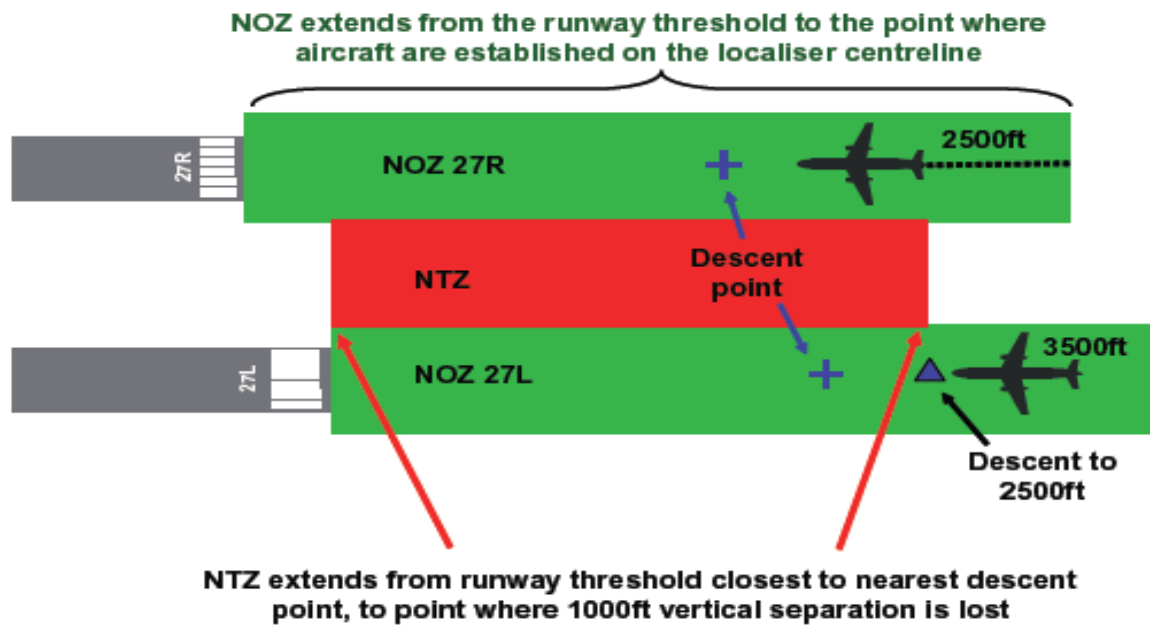

## Distance Between Centrelines:

